

23MY XD ASX INSPECTION AND MAINTENANCE SCHEDULE

For items which indicate both distance and time (in months), the inspection should be made at whichever (distance or time) comes first. Maintenance operation code

I : Inspection L : Lubrication R : Replace or change

Items			Service Intervals (Odometer reading or months, whichever occurs first)															
			12	24	36	48	60	72	84	96	108	120	132	144	156	168		
	Months	Odometer Reading	15	30	45	60	75	90	105	120	135	150	165	180	195	210		
OPERATIONS INSIDE THE ENGINE COMPARTMENT																		
Check drive belt for cracks, fraying, wear, and adjust its tension			I		I			I		I		I		I		I		I
Replace spark plugs								R						R				
Check valve clearance (* Denotes audible check only) *1		I*	I*	I*	I*	I*	I	I*	I*	I*	I*	I*	I*	I*	I*	I*	I*	I*
Check radiator hoses for damage and proper connection			I		I			I		I		I		I		I		I
Check engine coolant level in reservoir		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Change engine coolant *1		R: First 165,000km or 8 years, thereafter every 105,000km or 5 years																
Check air cleaner element for clogging and damage		Normal usage	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
		Severe usage	I: Every 7,500km or every 6 months															
Replace air cleaner element		Normal usage			R			R			R			R			R	
		Severe usage	R: More frequently															
Check fluid level in brake reservoir and clutch reservoir		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Change brake fluid			R		R			R			R			R			R	
Check battery condition		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Replace fuel filter													R					
OPERATIONS UNDER THE VEHICLE																		
Check suspension system for damage and looseness		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Check suspension arm ball joints for play, and dust covers for damage		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Check driveshaft boots for damage		Normal usage	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
		Severe usage	I: Every 7,500km															
Check steering linkage for damage and loose connections (including seals, boots and power assist fluid)		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Check manual transmission for oil leakage (In case of leakage, check the oil level)		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Change gear oil in manual transmission		Normal usage															R	
		Severe usage							R						R			
Check exhaust pipe connections for gas leakage, and check pipe installation			I		I			I			I			I			I	
OPERATIONS INSIDE THE VEHICLE																		
Check brake pedal and clutch pedal for free play		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Check parking brake lever stroke and play		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Replace air purifier filter		Normal usage	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R
		Severe usage	R: More frequently															
Check operation of all functions and lights		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
OPERATIONS OUTSIDE THE VEHICLE																		
Check wheel alignment			I		I			I			I			I			I	
Check tyre pressures		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Check front and rear wheel bearings for play					I						I					I		
Check brake hoses and pipes for leakage		Normal usage	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
		Severe usage	I: Every 7,500km or every 6 months															
Check brake pads and discs for wear		Normal usage	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
		Severe usage	I: Every 7,500km or every 6 months															
Check fuel hoses and pipes for leakage or deterioration			I		I			I			I			I			I	

Items	Service Intervals (Odometer reading or months, whichever occurs first)																
	Months	12	24	36	48	60	72	84	96	108	120	132	144	156	168		
	Odometer Reading × 1000 km	15	30	45	60	75	90	105	120	135	150	165	180	195	210		
OPERATIONS AFTER ENGINE IS WARMED UP																	
Check fluid level in CVT		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
Change CVT fluid	Normal usage														R		
	Severe usage	R: Every 40,000km															
Change engine oil	Normal usage	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	
	Severe usage	R: Every 7,500km															
Replace engine oil filter	Normal usage	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	
	Severe usage	R: Every 7,500km															
OTHERS																	
Check body condition for damage		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
Reset maintenance service interval reminder		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
Road test		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	

NOTES:

*1 : Use only MITSUBISHI MOTORS Genuine Super Long Life Coolant Premium or equivalent with proper mixture ratio of 50% anti-freeze and 50% demineralized or distilled water. Mixing any other type of coolant or the use of non-distilled water will reduce the life expectancy of the factory-fill coolant

"Severe usage" specifications apply to only vehicles used under severe operating conditions.

Severe operating conditions include the following cases :

- | | |
|---|---|
| (1) Driving in a dusty conditions or exposure to salty air or brine. | (6) Towing of a trailer. |
| (2) Driving on rough roads, on submerged roads, or hilly areas. | (7) Use as a taxi or as a rent-a-car. |
| (3) Driving in cold zones. | (8) More than 50% of operation time in heavy city traffic in hot temperatures of 32°C or higher. |
| (4) Engine idling for a long time or short-distance travel during cold weather. | (9) More than 50% of operation time at speeds of 120km/h or higher in hot temperatures of 30°C or higher. |
| (5) Frequent, sudden application of brakes. | (10) Operation under excessive load. |