



**I : Inspection L : Lubrication R : Replace or change ● : Applicable None : Not applicable**

Items			Service Intervals (Odometer reading or months, whichever occurs first)															
	Months		12	24	36	48	60	72	84	96	108	120	132	144	156	168		
	Odometer Reading	× 1000 km	15	30	45	60	75	90	105	120	135	150	165	180	195	210		
<b>OPERATIONS INSIDE THE VEHICLE</b>																		
Check brake pedal and clutch pedal for free play			I	I	I	I	I	I	I	I	I	I	I	I	I	I		
Check parking brake lever stroke and play			I	I	I	I	I	I	I	I	I	I	I	I	I	I		
Replace air purifier filter			R	R	R	R	R	R	R	R	R	R	R	R	R	R		
<b>OPERATIONS OUTSIDE THE VEHICLE</b>																		
Check wheel alignment (Visual inspection for tyre wear)				I		I		I		I		I		I		I		
Check front and rear wheel bearings for play						I				I				I				
Check brake hoses and pipes for leakage			I	I	I	I	I	I	I	I	I	I	I	I	I	I		
Check brake pads and discs for wear			Normal usage		I	I	I	I	I	I	I	I	I	I	I	I		
			Severe usage		I : Every 7,500km or every 6 months													
Check fuel hoses and pipes for leakage or deterioration				I		I		I		I		I		I		I		
<b>OPERATIONS AFTER ENGINE IS WARMED UP</b>																		
Check fluid level in automatic transmission and CVT			Petrol & Diesel powered vehicles		I	I	I	I	I	I	I	I	I	I	I	I		
Replace automatic transmission fluid and CVT fluid			Petrol & Diesel powered vehicle		Normal usage												R : Every 90,000km	
			Severe usage		R : Every 45,000km													
Replace engine oil (See owners manual for specification)			Petrol & Diesel powered vehicle		Normal usage												R : Every 15,000km or every 12 months	
			Severe usage		R : Every 7,500km													
Replace engine oil filter			Petrol & Diesel powered vehicle		Normal usage												R : Every 15,000km or every 12 months	
			Severe usage		R : Every 7,500km													
Check engine idling speed			Petrol & Diesel powered vehicles		I	I	I	I	I	I	I	I	I	I	I	I		
Check CO concentration (petrol-powered vehicles)					I	I	I	I	I	I	I	I	I	I	I	I		
<b>OTHERS</b>																		
Check body condition for damage			I : Every year															
Check the common rail engine (small injection quantity learning)			Diesel-engine		I	I	I	I	I	I	I	I	I	I	I	I		
Road test			I															

NOTE:

\*1 : If found any noise from the valve any time, please check the valve clearance.

"Severe usage" specifications apply to only vehicles used under severe operating conditions. Severe operating conditions include the following cases :

- (1) Driving in a dusty area or in an area in which the vehicle is likely to be exposed to salty air or brine.
- (2) Driving on rough roads, on submerged roads, or hilly areas.
- (3) Driving in cold zones.
- (4) Engine idling for a long time or short-distance travel during cold weather.
- (5) Frequent, sudden application of brakes.
- (6) Towing of a trailer.
- (7) Use as a taxi or as a rent-a-car.
- (8) More than 50% of operation time in heavy city traffic in hot temperatures of 32°C or higher.
- (9) More than 50% of operation time at speeds of 120km/h or higher in hot temperatures of 30°C or higher.
- (10) Operation under excessive load.